

ClearView Step Light

INSTALLATION

REQUIRED TOOLS

- Phillips Head Screwdriver
- Wire Cutter
- Wire Stripper
- 2.0mm Allen Wrench (included)

PROBLEMS? WE CAN HELP!

Just give us a call if you have any questions or need any help, 608-237-1542.

Otherwise, if you need us to see what you are looking in order to help you, send an email to support@upstream-outfitters.com with attached photos.

Step 1

REMOVE OLD STEP LIGHT




REMOVE OLD COVER

To protect your trailer's finish, place a bit of painters tape along the right side of the old light cover. Then, use a flathead screwdriver to pry off the cover.

CLEAN THE AREA

Take a minute to clean around the area that you will install the light so you don't trap dirt between the new light gasket and the aluminum of your trailer.

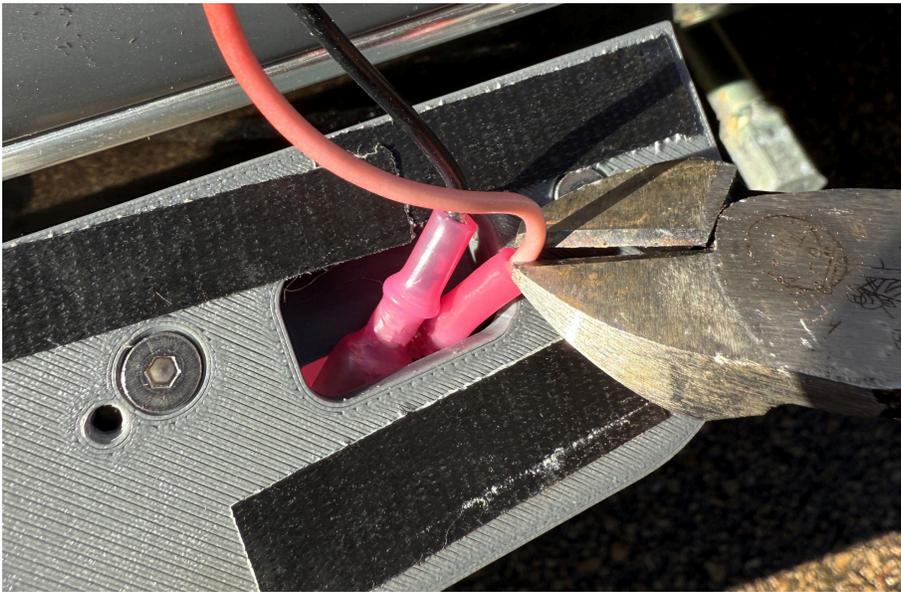

CUT WIRES

Cut the wires as close as you can get to the existing connectors.



STRIP WIRES

Strip the ends of the wires 1/4".


Step 2

INSTALL BASE PLATE



PASS WIRES

Pass the wires from your trailer through the holes in the base plate.

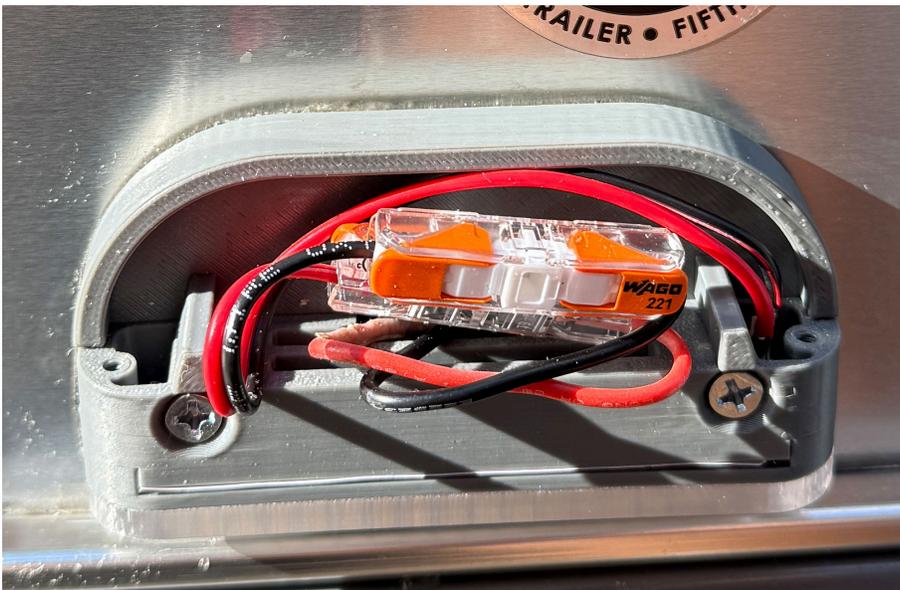

ATTACH BASE PLATE

Secure the base plate in place using the 2 included #6 x 1-¼" sheet metal screws.


Step 3

CONNECT THE WIRES



OPEN THE LATCH

Open the receiving latch of the Wago connector on the trailer wires.

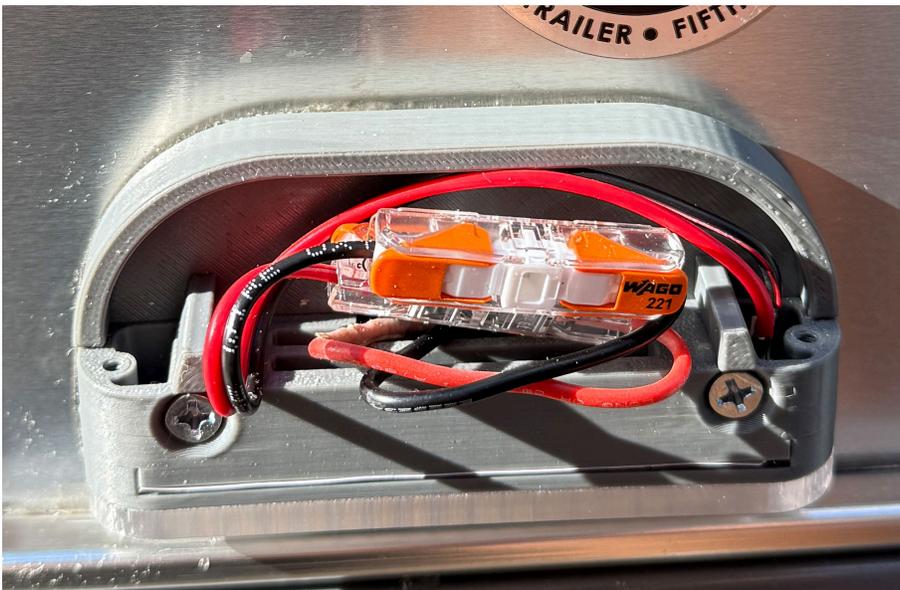

CLOSE THE LATCH

Close the receiving latch of the Wago connector to clamp the wires into place.

Step 4

ATTACH COVER



ATTACH COVER

Using the 2 small screws, attach the cover through the side holes.

ENJOY!